

# P4-ST-5000

## START TRUCK

12V  
24V

AGM

### LED CHARGE INDICATOR

The test button allows users to easily check the charge level of the booster and test the alternator of a vehicle.

### 12-24V CONNECTORS

Easy to use switch allows the booster to be changed from 12V to 24V.

### INBUILT SAFETY FUSE

Pure brass clamps with braided connection protected by a safety fuse.



**Model**  
P4-ST-5000

**Volts**  
12/24

**Peak Amps (A)**  
5000/2500

**# Of Batteries**  
2

**Location of Fuse**  
Clamp

**Fuse (A)**  
500

**Dimensions (cm)**  
31x36x19

**Cable Ø (mm2)**  
50

**Cable Length (cm)**  
186

**Unit Weight (KG)**  
21

**Charger Voltage (V)**  
14.4

**Charger Amps (A)**  
3

**Vehicle types**



[www.lemania-energy.com](http://www.lemania-energy.com)

**LEMANIAENERGY**  
Switzerland +

# P4-ST-6200

12V  
24V

AGM

## START TRUCK

### LED CHARGE INDICATOR

The test button allows users to easily check the charge level of the booster and test the alternator of a vehicle.

### 12-24V CONNECTORS

Easy to use switch allows the booster to be changed from 12V to 24V.

### INBUILT SAFETY FUSE

Pure brass clamps with braided connection protected by a safety fuse.



**Model**  
P4-ST-6200

**Volts**  
12/24

**Peak Amps (A)**  
6200/3100

**# Of Batteries**  
2

**Location of Fuse**  
Clamp

**Fuse (A)**  
500

**Dimensions (cm)**  
31x36x19

**Cable Ø (mm2)**  
50

**Cable Length (cm)**  
186

**Unit Weight (KG)**  
21

**Charger Voltage (V)**  
14.4

**Charger Amps (A)**  
3

**Vehicle types**



**LEMANIA ENERGY**  
Switzerland +

[www.lemania-energy.com](http://www.lemania-energy.com)