# P4-ST-5000





## **START TRUCK**

#### LED CHARGE INDICATOR

The test button allows users to easily check the charge level of the booster and test the alternator of a vehicle.

#### NBUILT SAFTEY FUSE

Pure brass clamps with braided connection protected by a saftey fuse.

### 12-24V CONNECTORS

Easy to use switch allows the booster to be changed from 12V to 24V.









Model P4-ST-5000

**Volts** 12/24

Peak Amps (A) 5000/2500

# Of Batteries

**Location of Fuse** Clamp

Fuse (A) 500

Dimensions (cm) 31x36x19

Cable Ø (mm2) 50

Cable Length (cm)

Unit Weight (KG)

Charger Voltage (V)

Charger Amps (A)

Vehicle types





