P16-TR-5000

START TRUCK





12-24V SWITCH

Easy to use switch allows the booster to be changed from 12V to 24V.

REVERSE POLARITY ALARM

This audible and visual alert informs professionals of incorrect terminal connections.

DIGITAL VOLTMETER

This display allows professionals to quickly see the voltage available and to test the alternator of a vehicle.









Model P16-TR-5000

Volts 12/24

Peak Amps (A) 5000/2500

Of Batteries

Location of Fuse

Fuse (A) 500

Dimensions (cm) 55x35x21

Cable Ø (mm²) 50

Cable Length (cm)

Unit Weight (KG)

Charger Voltage (V)

Charger Amps (A)

Vehicle types







P16-TR-6200

START TRUCK

12V 24V



REVERSE POLARITY ALARM

This audible and visual alert informs professionals of incorrect terminal connections.

12-24V SWITCH

Easy to use switch allows the booster to be changed from

12V to 24V.

DIGITAL VOLTMETER

This display allows professionals to quickly see the voltage available and to test the alternator of a vehicle.







Model P16-TR-6200

Volts 12/24

Peak Amps (A) 6200/3100

Of Batteries

Location of Fuse Clamp

Fuse (A) 500

Dimensions (cm) 55x35x21

Cable Ø (mm2) 50

Cable Length (cm) 210

Unit Weight (KG) 28

Charger Voltage (V)

Charger Amps (A)

Vehicle types





