

P9-TR-5000

START TRUCK

LED CHARGE INDICATOR

The test button allows users to easily check the charge level of the booster and test the alternator of a vehicle.

REVERSE POLARITY ALARM

This audible and visual alert informs professionals of incorrect terminal connections.

12-24V CONNECTORS

Easy to use switch allows the booster to be changed from 12V to 24V.

TROLLEY SYSTEM

Easily move the booster to where it is needed using the trolley wheels and handle.



Model
P9-TR-5000

Volts
12/24

Peak Amps (A)
5000/2500

Of Batteries
2

Location of Fuse
Clamp

Fuse (A)
500

Dimensions (cm)
38x35x27

Cable Ø (mm2)
50

Cable Length (cm)
165

Unit Weight (KG)
24

Charger Voltage (V)
14.4

Charger Amps (A)
3



Car SUV
MPV 4WD



Truck



Van



Mining
truck

12V
24V

AGM



LEMANIA ENERGY
Switzerland

P9-TR-6200

START TRUCK

LED CHARGE INDICATOR

The test button allows users to easily check the charge level of the booster and test the alternator of a vehicle.

REVERSE POLARITY ALARM

This audible and visual alert informs professionals of incorrect terminal connections.

12-24V CONNECTORS

Easy to use switch allows the booster to be changed from 12V to 24V.

TROLLEY SYSTEM

Easily move the booster to where it is needed using the trolley wheels and handle.



Car SUV
MPV 4WD



Truck



Van



Mining
truck

12V
24V

AGM

Model
P9-TR-6200

Volts
12/24

Peak Amps (A)
6200/3100

Of Batteries
2

Location of Fuse
Clamp

Fuse (A)
500

Dimensions (cm)
38x35x27

Cable Ø (mm2)
50

Cable Length (cm)
165

Unit Weight (KG)
27

Charger Voltage (V)
14.4

Charger Amps (A)
3



LEMANIA ENERGY
Switzerland

www.lemania-energy.com