## P21-TR-5000

## START TRUCK





#### 12-24V SWITCH

Easy to use switch allows the booster to be changed from 12V to 24V.



#### REVERSE POLARITY ALARM

This audible and visual alert informs professionals of incorrect terminal connections.

#### DIGITAL MOLTMETER

This display allows professionals to quickly see the voltage available and to test the alternator of a vehicle.



Model P21-TR-5000

**Volts** 12/24

Peak Amps (A) 5000/2500

# Of Batteries

Location of Fuse
Clamp

**Fuse (A)** 500

Dimensions (cm) 49x34x29

**Cable** Ø **(mm2)** 50

Cable reach (cm)

Unit Weight (KG) 25

Charger Voltage (V)

Charger Amps (A)

Vehicle types







# P21-R-6400

### START TRUCK





#### **12-24V SWITCH**

Easy to use switch allows the booster to be changed from 12V to 24V.





#### DICITAL VOLTMETED

This audible and visual alert informs professionals of

incorrect terminal connections.

This display allows professionals to quickly see the voltage available and to test the alternator of a vehicle.



**Model** P21-TR-6400

**Volts** 12/24

Peak Amps (A) 6400/3200

# Of Batteries

**Location of Fuse** Clamp

Fuse (A) 500

Dimensions (cm) 49x34x29

**Cable** Ø **(mm2)** 50

Cable reach (cm) 156

Unit Weight (KG)

Charger Voltage (V)

—— Charger Amps (A)

Vehicle types





