

P11-ST-5000

START TRUCK

LED CHARGE INDICATOR

The test button allows users to easily check the charge level of the booster and test the alternator of a vehicle.



Car SUV
MPV 4WD



Motorcycle



Van



Truck

12V
24V



Model
P11-ST-5000

Volts
12/24

Peak Amps (A)
5000/2500

Of Batteries
2

Location of Fuse
Clamp

Fuse (A)
500

Dimensions (cm)
35X30X30

Cable Ø (mm2)
50

Cable Length (cm)
170

Unit Weight (KG)
19

Charger Voltage (V)
14.4

Charger Amps (A)
3



LEMANIA ENERGY
Switzerland +

P11-ST-6200

START TRUCK

LED CHARGE INDICATOR

The test button allows users to easily check the charge level of the booster and test the alternator of a vehicle.



Car SUV
MPV 4WD



Motorcycle



Van



Truck

12V
24V



Model
P11-ST-6200

Volts
12/24

Peak Amps (A)
6200/3100

Of Batteries
2

Location of Fuse
Clamp

Fuse (A)
500

Dimensions (cm)
35X30X30

Cable Ø (mm2)
50

Cable Length (cm)
170

Unit Weight (KG)
21

Charger Voltage (V)
14,4

Charger Amps (A)
3



LEMANIAENERGY
Switzerland +