

LEMANIA**ENERGY**
Switzerland +

6000LM Adjustable Colours Tripod Light

INSTRUCTION W17





Many thanks for choosing a product . With the following Instructions, we would like to help you to get the best functions of your new light.

Keep this instruction manual for future reference or for subsequent possessors.



TECHNICAL DATA

Light Source	high power SMD LED, 2700/3500/4500/5500/6500K
Luminous Power	ca. 6000 lumen – Turbo Mode
	ca. 2400 lumen – High Mode
	ca. 1200 lumen – Mid Mode
	ca. 600 lumen – Low Mode
Operating time	ca. 2h – Turbo Mode ca. 4h –
	High Mode ca. 8h – Mid Mode
	ca. 16h – Low Mode
Battery Specification	Li-ion 14.8V 5200mAh, 76.96Wh
Charging Time	ca. 4.5 h
Charging Input	DC 20V 1.1A
Degree of protection	IP 65, IK 07
Operating temperature	– 10 °C to +40 °C

WARNING

- Do not open the device.
- Do not look directly into the light emitting lamp - Risk of eye injuries! 3
- Do not operate in direct sun light or extreme temperature conditions.
- Operating temperature, -10°C to +40°C.
- Keep away from children! Children should be supervised in order to ensure that they do not play with the device!

OPERATING & CHARGING PROCEDURE

- WL7060 Operating mode as below:

Brightness mode: Low-Mid-High-Turbo-OFF

Colour mode: 2700K-3500K-4500K-5500K-6500K

Memory Function

- Switch lamp on during charging.
- The battery indicator will blink during charging.
- The battery indicator will stay lighting up after finished the charging.
- Always only use the charger recommended to charge the lamp. The use of a NON-recommended charger can lead to a fire and destroy the lamp.
- Before taking the hand lamp into service for the first time charge it for 4-5 hours.
- Fully charge the hand lamp before it is stored for a longer period.

SAFETY INSTRUCTIONS

- Do not use the device if there is damage to the housing, plug or cable. Consult your local authorized specialist!
- Do not open the device! Repair work and replacing the rechargeable battery pack may only be carried out by electricians.
- Carry out cleaning tasks only when the mains plug is removed from the mains power!
- There is a risk of short-circuit. Repairs on the device may only be carried out by commissioned and trained persons. Please contact your nearest authorized branch.
- Protect the battery against heat, e. g., against continuous intense sunlight, fire, water, and moisture. Danger of explosion.
- If the battery is damaged or not used correctly. Fluids can leak from the battery. Avoid contact with these. Leaking battery fluids can lead to skin irritation or burns. Rinse off with water if you should come into contact. If the fluid gets into your eyes, make sure you get medical help.
- The lamp is not allowed to be placed on the light surface while being switched on.

Environmental Protection

- The device should not be discarded in the normal household waste under any circumstances.
- Dispose of the device via an authorized disposal center or your  waste disposal facility. Observe the current applicable regulations. Contact your waste disposal facility in the event of any doubt. Dispose of all packaging materials via an environmentally friendly disposal facility. Rechargeable batteries must not be disposed of in the household waste. Return used rechargeable batteries to your dealer or hand them in to a battery collection facility.



WARRANTY

- The device has a two years WARRANTY against faulty workmanship or materials. The guarantee does not apply to damage to the device arising through a failure to comply with the operating instructions.

Subject to technical changes. We assume no liability for printing errors.